SONY

4-227-953-14(1)

Remote Commander

Operating Instructions

RM-LP204
RM-LP204M

© 2000 by Sony Corporation

Downloaded from www.Manualslib.com manuals search engine

Panel Layout

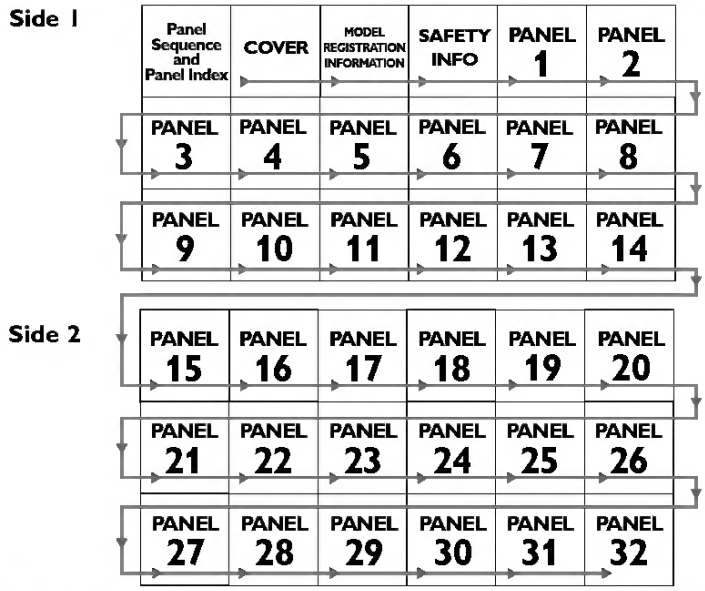

Panel Index

Subject	Panel No.
Antenna Basic Connection	1
Audio/Video Connections	
AV Input Jacks	4
Component Video Input Jacks	7
Front (Side) Audio/Video Input Jacks	5
Headphone Jack	5
AV Output Jacks	8
S-Video Input Jacks	6
AutoLock™ Controls	
Access Code	19
Block All Channels	21
Block Channels	20
Clear All Blocked Channels	21
Movie Ratings	22
Other Blocking Options	24
TV Ratings	23
Understanding AutoLock™	18
Automcatically Programming TV	13
AutoPicture™ Control	25
AutoSound™ Control	25
Basic Remote Operation	3
Basic Television Operation	3
Cable Box Connection	2
Channel Edit	14
Closed Caption Control	25
Factory Service Locations	30-31
Format Controls	17
Language Controls	11
Limited Warranty	32
Picture Menu Controls	15
QuadraSurf™	27-28
Remote Batteries	3
Remote Control Button Descriptions	9-10
Sleeptimer	25
Sound Menu Controls	14-15
Tuner Mode	16

Downloaded from www.Manualslib.com manuals search engine

Section 2

Installing PS Utility

Step 1 Insert the provided CD and wait for the setup menu to appear.

Step 2 Click on **PS Utility**.

Note: If the setup menu does not appear automatically after you have inserted the CD, go to **Start**, **Run**, type **D:\autorun.exe** (where **D** is the letter of your CD drive) and click **OK**.

Step 3 Click **Next**.

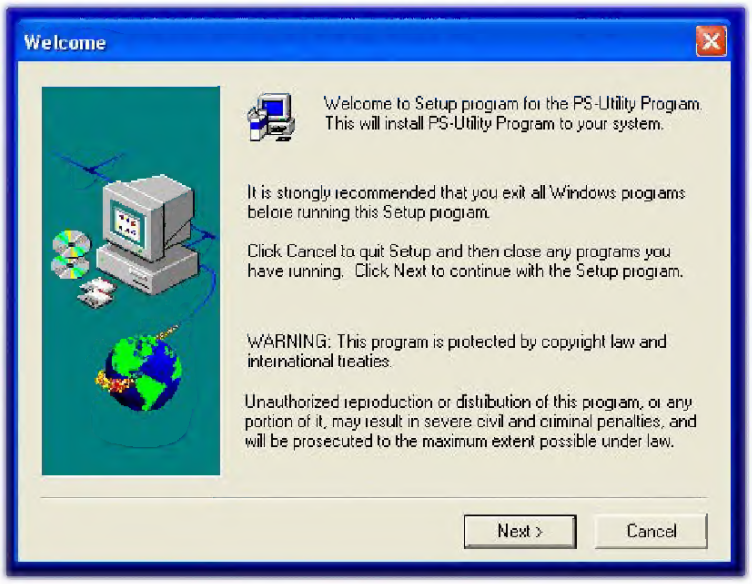
Welcome
Welcome to Setup program for the PS-Utility Program. This will install PS-Utility Program to your system.
It is strongly recommended that you exit all Windows programs before running this Setup program.
Click Cancel to quit Setup and then close any programs you have running. Click Next to continue with the Setup program.
WARNING: This program is protected by copyright law and international treaties.
Unauthorized reproduction or distribution of this program, or any portion of it, may result in severe civil and criminal penalties, and will be prosecuted to the maximum extent possible under law.
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

Disclaimer

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.
Intel is a registered trademark of Intel Corporation.
Pentium Dual-Core, Celeron Dual-Core, Core 2 Duo, Core 2 Quad, Celeron, and combinations thereof, are trademarks of Intel Corporation.
Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Downloaded from www.Manualslib.com manuals search engine

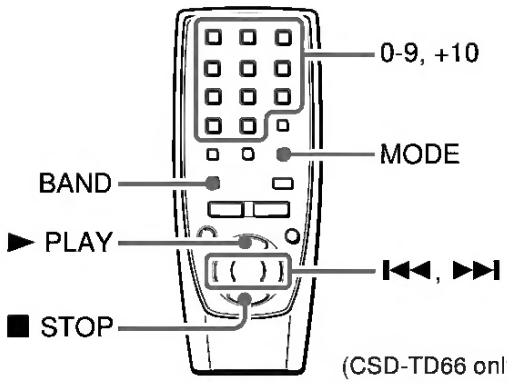

PRESETTING STATIONS

You can preset up to 15 stations in each band.

1 Select a station.

2 Press * ■ STOP/MEMORY once so that "M" is displayed to store the station.
A station is assigned a preset number, beginning from 1 in consecutive order for each band.

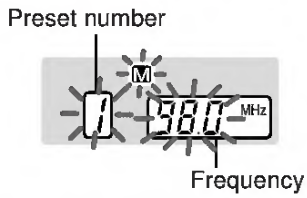

* or ■ on the remote control (CSD-TD66 only)

3 Repeat steps 1 and 2.
The next station will not be stored if a total of 15 preset stations have already been stored for a band.

To listen to preset stations
Select a band then press ►II PLAY/PAUSE/PRESET repeatedly.
► PLAY on the remote control is also available (CSD-TD66 only).

To select a preset number directly with the remote control (CSD-TD66 only)
Press the numbered buttons 0-9 and +10.
Example:
To select number 15, press +10 and 5.
To select number 10, press +10 and 0.

To clear a preset station
Select the preset number first. Within 4 seconds, keep ■ pressed until "M" and the preset number disappear in the display.
The higher numbers in the band are decreased by one.

Remote Control (CSD-TD66 only)

Insert two R6 (size AA) batteries.

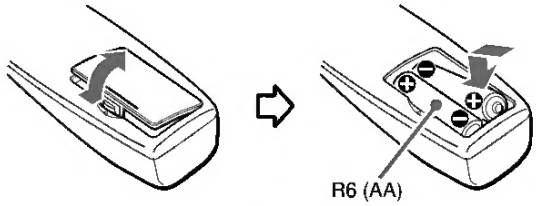

When the reach of the remote control signal is less than 5 meters (16 feet), replace the batteries.

The remote control may not operate correctly when:
- The unit is exposed to intense light, such as direct sunlight
- Objects block the remote control signal to the unit

To use the buttons on the remote control
Buttons on the remote control and the main unit with identical indications have the same functions.

To turn the power on
Press POWER to turn on the display.
When using the unit on the batteries, this button will not turn the power on.

To turn the power off
Press POWER to turn off the display.
When one of the deck operation buttons is pressed, this button will not turn the power off.

To use the FUNCTION button
Each time FUNCTION is pressed while the power is on, the function is selected cyclically.

→ CD → RADIO → *TAPE ┐

* applicable when one of the deck operation buttons is pressed

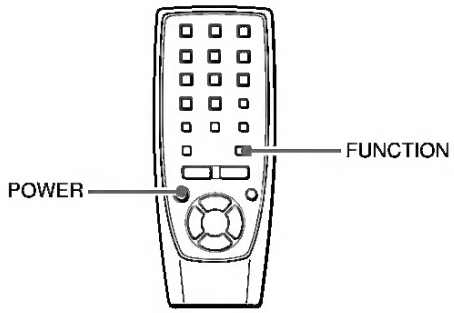

En

Downloaded from www.Manualslib.com manuals search engine

Step 6 Click **Yes** to acknowledge the need for a reboot after the installation.

Step 7 Click **Next** to accept the default Destination Folder.

Step 8 Click **OK** to acknowledge the prompt.

Step 9 Click **OK** to reboot your computer.

Step 10 After your computer is restarted, insert the USB Adapter into the computer.

Step 11 Click **Next** at the Add New Hardware Wizard.

Step 12 Verify **Search for the best driver for your device** is selected and click **Next**.

Step 13 Click **Next** to install the driver.

Step 14 Click **Finish** to exit the wizard.

Step 15 Restart the computer to complete the driver installation.

Downloaded from www.Manualslib.com manuals search engine

CONFIGURATION DIAGRAM:
AXW-AVT / AXW-AVR with AFI (American Fibertek) Fiber (MT/MR-89A-AX), 1 of 2

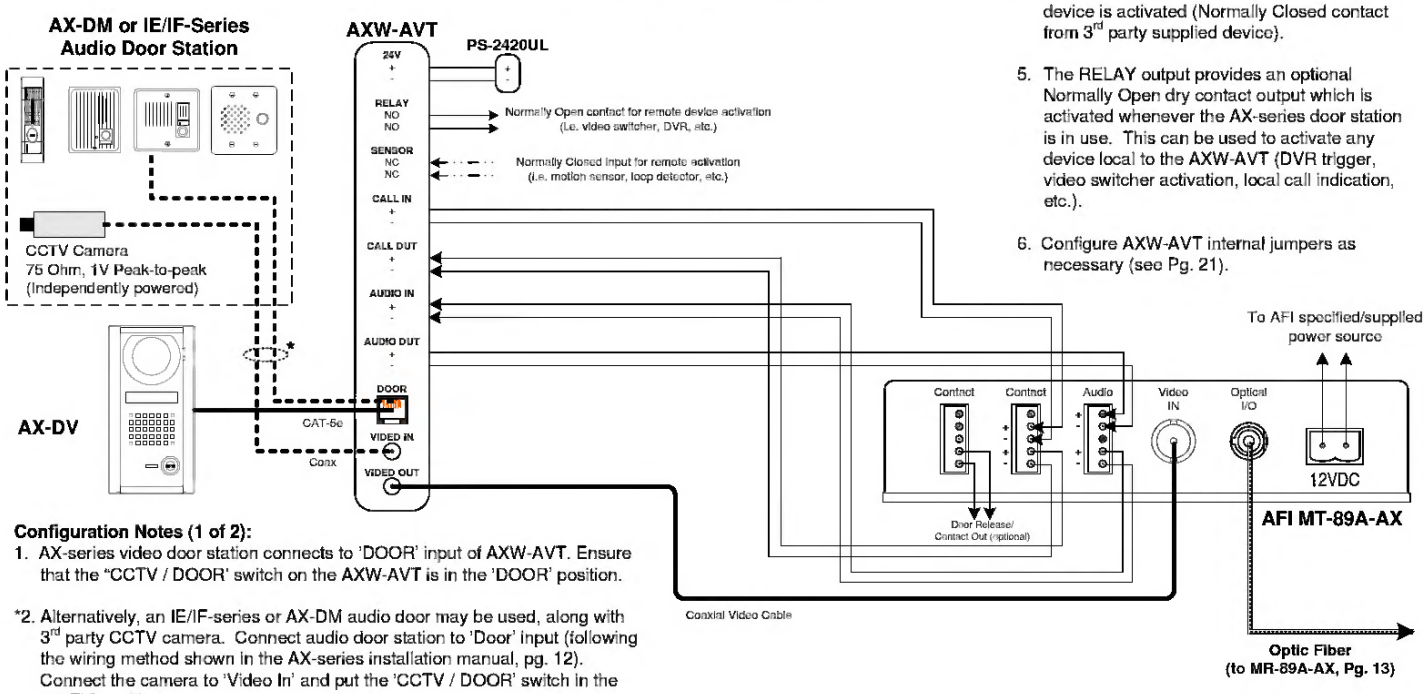

Configuration Notes (1 of 2):

1. AX-series video door station connects to 'DOOR' input of AXW-AVT. Ensure that the "CCTV / DOOR' switch on the AXW-AVT is in the 'DOOR' position.

*2. Alternatively, an IE/IF-series or AX-DM audio door may be used, along with 3rd party CCTV camera. Connect audio door station to 'Door' input (following the wiring method shown in the AX-series installation manual, pg. 12). Connect the camera to 'Video In' and put the 'CCTV / DOOR' switch in the 'CCTV' position.

3. Connect the Call In / Call Out and Audio In / Audio Out connections on the AXW-AVT to the terminal block of the AFI MT-89A-AX, as shown. For detailed terminal definitions, consult the AFI MT-89A-AX installation sheet.

Configuration Notes (1 of 2, continued):

4. When the SENSOR input is used, the door station will be turned on whenever the sensor device is activated (Normally Closed contact from 3rd party supplied device).

5. The RELAY output provides an optional Normally Open dry contact output which is activated whenever the AX-series door station is in use. This can be used to activate any device local to the AXW-AVT (DVR trigger, video switcher activation, local call indication, etc.).

6. Configure AXW-AVT internal jumpers as necessary (see Pg. 21).

Please Note:
Only information pertaining to the connection and operation of the AXW-AVT / AXW-AVR and listed 3rd party devices interfacing with it are included here. Aiphone is not responsible for attempts to connect the AXW-AVT / AXW-AVR to untested 3rd party transmission hardware. Consult the installation manual for the 3rd party device being utilized for further information regarding physical mounting, base functionality, power requirements, etc. For the most up-to-date compatibility information, please consult http://www.aiphone.com or contact Aiphone Technical Support.

For complete AX system installation, wiring, and programming information, please consult the AX Installation Manual (included on CD with AX Central Exchange Unit, or available at http://www.aiphone.com).

Downloaded from www.Manualslib.com manuals search engine

or possible fees associated with repair, contact CAPS directly at the following number:

CAPS Department (256) 963-8722

Identify the RMA number clearly on the package (below address), and return to the following address:

ADTRAN Customer and Product Service
901 Explorer Blvd.
Huntsville, Alabama 35806
RMA # _____

Training

The Enterprise Network (EN) Technical Training offers training on our most popular products. These courses include overviews on product features and functions while covering applications of ADTRAN's product lines. ADTRAN provides a variety of training options, including customized training and courses taught at our facilities or at your site. For more information about training, please contact your Territory Manager or the Enterprise Training Coordinator by phone at 800-615-1176 ext. 7500, by fax at 256-963-7941, or by email at training@adtran.com.

Training (800) 615-1176, ext. 7500

 © 2001, ADTRAN, Inc.

Downloaded from www.Manualslib.com manuals search engine

5 Remote Control Button Descriptions

NUMBER Buttons
Press the Number buttons to select TV channels or to enter values in the menu. For single-digit channels, press the Number button for the channel you want. The TV will pause briefly before going to the chosen channel.

A/CH Button (Alternate Channel)
Press to switch between the last channel and the present channel.
Details are on panel 26.

STATUS/EXIT Button
Press to see the current channel number. Press to remove a menu.

CC Button
Press to activate Closed Captioning.
Details are on panel 23.

SLEEP Button
Press to set the TV to turn itself off within a certain time. *Details are on panel 23.*

CLOCK Button
Press to access the Clock menu, where you can set the clock or the On-Timer.
Details are on panel 12.

SURF Button
Press to select up to five previously viewed channels. *Details are on panel 25.*

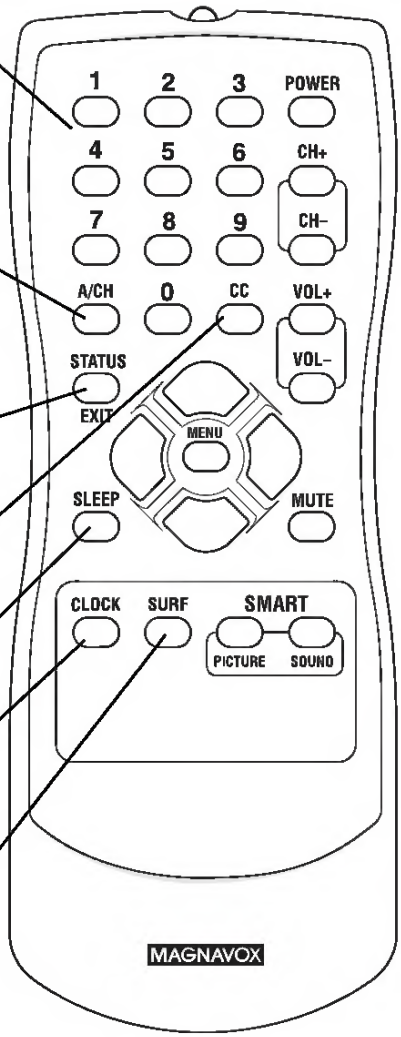

Downloaded from www.Manualslib.com manuals search engine

Door reversal

Should the location demand it, door-opening direction can be refitted from right-handed to left-handed.

Appliances are supplied right-handed.

Following operations are to be done on the basis of figures and explanations:

☞ 1. To perform the operations listed below it is recommended to ask another person for help who safely can keep hold of the doors while performing the operations.

2. Disconnect the appliance from the electricity supply.
3. Open the doors and dismount the double door hinge (a,b) by removing the screws (2 pieces) (c). (fig. 2)
4. Take off the double door hinge (a,b,c) by gradually removing it from the cabinet, slightly tilting both doors. Do not forget to remove the plastic spacer (b) under the hinge. (fig. 2)
5. Take off the refrigerator door by pulling it slightly downwards.
6. Take off the freezer door by pulling it slightly upwards.
7. Unscrew the top door hinge pin (d) of the refrigerator then screw it back on the other side. (fig. 1)
8. Remove the insert of the plinth (e) by a screwdriver. (fig. 4)
9. Unmount the lower hinge pin (f) and its washer (h) and mount them on the other side. (fig. 4)
10. Replace the insert of the plinth (e) on the other side.
11. Remove the covering pins (3 pieces) (n,k) of the double door holder on the left side and put them to the other side. (fig. 2)
12. Remove the (t, z) plugs from both doors. (fig. 3)
13. Remove the (u, v) door closing devices by unscrewing the (s) screw.
14. Replace the (u, v) door devices on the opposite side of the other door after turning them, then fix them by screwing the (s) screw.

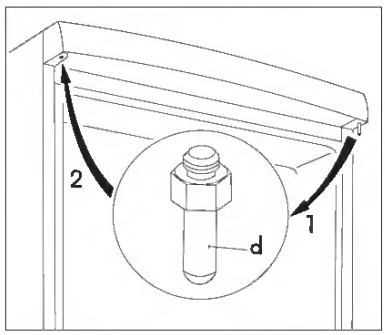

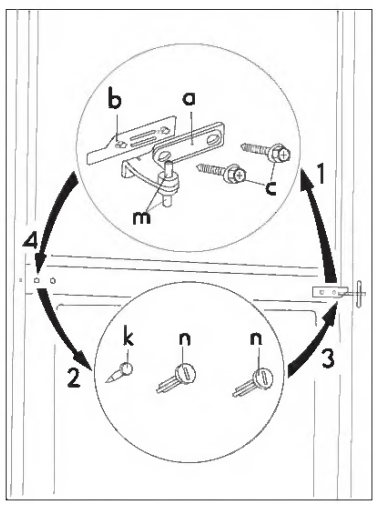

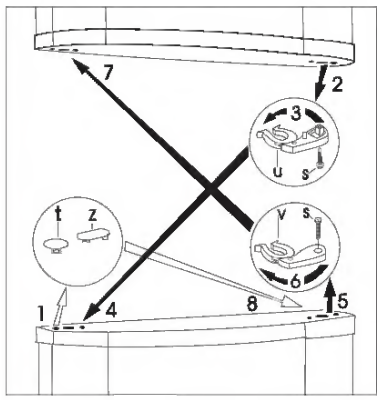

Downloaded from www.Manualslib.com manuals search engine

FUNCTIONS OF TV CONTROLS

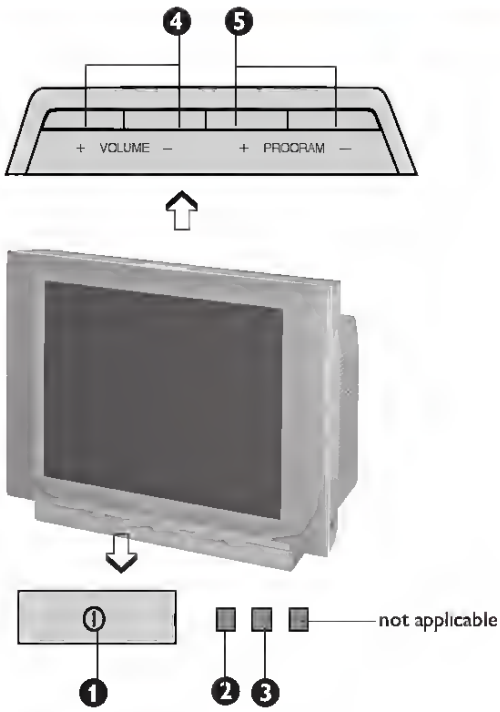

1	**Mains Power button**	Switch mains power on or off.
2	**Standby Light indicator**	Indicate red light when standby mode is activated.
3	**Remote Sensor**	Acts as a sensor for activating the controls of the TV when remote control handset is aimed at it.
4	**Volume + / – button**	Adjust sound volume louder/softer.
5	**Channel + / – button**	Select channel in ascending/descending order.

Note

- You can enter the main menu by pressing both the **Volume** + and – buttons at the same time.
- Press the **Channel** + or – button to select the next item on the menu.
- Press the **Volume** + or – button to access the sub-menus and adjust the settings

5-11_21PT4323/E 11 06/05/03 11:10 AM

Downloaded from www.Manualslib.com manuals search engine

4.3 Common issues

Issues	Possible reasons	How to fix
My internet has stopped working	• Incorrect setup • Loose or disconnected cables behind the modem • Network related issue outside the house	• Check the cables are connected securely • Restart your modem • Use the app to check your internet
My internet is really slow	• Poor Wi-Fi signal strength • Multiple users connected at the same time • Speed of your plan is insufficient	• Restart your modem • If possible, use a wired connection • Upgrade to faster plan • If possible relocate the modem to a more centralised location • Use the 5GHz Wi-Fi band instead of the 2.4GHz band
My internet keeps dropping out	• Poor Wi-fi signal strength • Network related issue outside the house • Faulty or missing filter for ADSL/VDSL	• Restart your modem • Connect a filter to all jackpoints in use if you are using ADSL/VDSL
I cannot connect my device to the Wi-Fi	• Poor Wi-Fi signal strength • Issue with the device • Exceeds the maximum number of devices on connected on Wi-Fi	• Restart your modem • Ensure the Wi-fi on the modem is switched on • Restart your device • Check your Wi-fi username and password

Scan to check internet
Check and fix your internet by scanning the QR code using your mobile phone camera or QR code reader

Need assistance?
If you are still having issues Go to www.spark.co.nz/contactus to chat or book a call with us.

Download the app
Available on the App Store
Google play

4. Configure the WLAN Monitor

This section describes the various functions of the WLAN Monitor that you can configure, including the settings of wireless encryption.

4.1 Configuration Tab

The **Configuration Tab** displays all available Access Points detected.

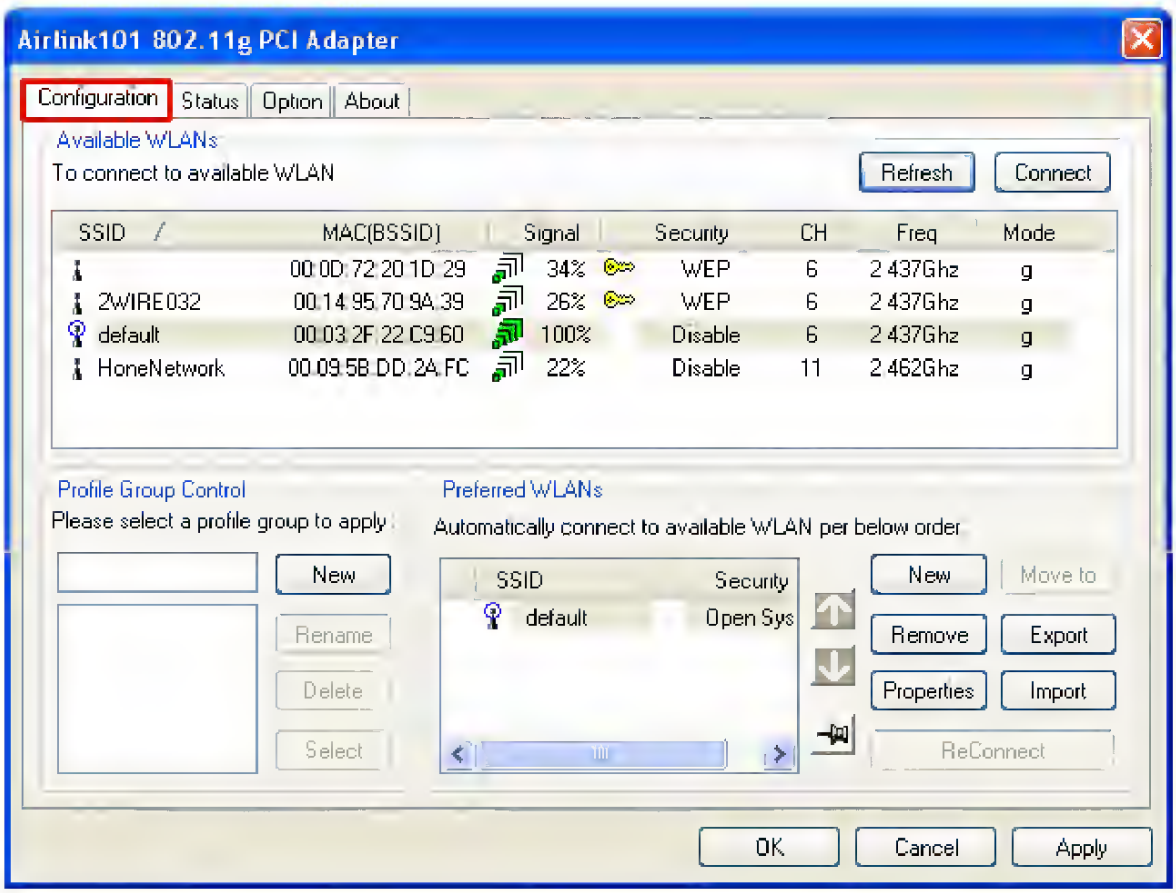

Available WLANs: Displays all available Access Points detected. To update the list, click on **Refresh**. To connect to a SSID in the list, click on **Connect**.

Preferred WLANs: You may add a preferred SSID that the wireless adapter will automatically connect to upon startup. To add a new SSID from the available WLANs list, select the desired SSID and click **Connect**. To add a new SSID that is not listed in the available WLANs list, click on **New** and manually enter the name of the SSID. If you have more than one preferred WLAN, you may move the SSID up or down the list. Each time the computer starts up, the wireless adapter will attempt to connect to the SSID

Downloaded from www.Manualslib.com manuals search engine

Czech

Symbol na výrobku nebo jeho balení udává, že tento výrobek nepatří do domácího odpadu. Je nutné odvézt ho do sběrného místa pro recyklaci elektrického a elektronického zařízení. Zajištěním správné likvidace tohoto výrobku pomůžete zabránit negativním důsledkům pro životní prostředí a lidské zdraví, které by jinak byly způsobeny nevhodnou likvidací tohoto výrobku. Podrobnější informace o recyklaci tohoto výrobku zjistíte u příslušného místního úřadu, služby pro likvidaci domovního odpadu nebo v obchodě, kde jste výrobek zakoupili.

Romanian

Simbolul de pe produs sau de pe ambalaj indică faptul că produsul nu trebuie aruncat împreună cu gunoiul menajer. Trebuie predat la punctul de colectare corespunzător pentru reciclarea echipamentelor electrice şi electronice. Asigurându-vă că aţi eliminat în mod corect produsul, ajutaţi la evitarea potenţialelor consecinţe negative pentru mediul înconjurător şi pentru sănătatea persoanelor, consecinţe care ar putea deriva din aruncarea necorespunzătoare a acestui produs. Pentru mai multe informaţii detaliate despre reciclarea acestui produs, vă rugăm să contactaţi biroul local, serviciul pentru eliminarea deşeurilor sau magazinul de la care l-aţi achiziţionat.

Slovenian

Simbol na izdelku ali na njegovi embalaži označuje, da z izdelkom ni dovoljeno ravnati kot z običajnimi gospodinjskimi odpadki. Izdelek odpeljite na ustrezno zbirno mesto za predelavo električne in elektronske opreme.
S pravilnim načinom odstranjevanja izdelka boste pomagali preprečiti morebitne negativne posledice in vplive na okolje in zdravje ljudi, ki bi se lahko pojavile v primeru nepravilnega odstranjevanja izdelka.
Za podrobnejše informacije o odstranjevanju in predelavi izdelka se obrnite na pristojen mestni organ za odstranjevanje odpadkov, komunalno službo ali na trgovino, v kateri ste izdelek kupili.

Türkçe

Ürünün ya da ambalajının üzerindeki simgesi, bu ürünün normal ev çöpü gibi atılmayıp, elektrik ve elektronik cihazların geri dönüşüm için verildiği özel toplama noktalarından birine verilmesi gerektiğini belirtir. Bu ürünün doğru şekilde imha edilmesine katkıda bulunmakla hem çevreyi, hem de çevrenizdekilerin sağlığını korumuş olursunuz. Yanlış şekilde imha ise hem çevreye hem sağlığa zararlıdır. Bu ürünün geri dönüşümüne ilişkin daha ayrıntılı bilgileri belediyenizden, çöp dairenizden veya ürünü satın almış olduğunuz satıcıdan edinebilirsiniz.

Russian

Символ на изделии или на его упаковке указывает, что оно не подлежит утилизации в качестве бытовых отходов. Вместо этого его следует сдать в соответствующий пункт приемки электронного и электрооборудования для последующей утилизации. Соблюдая правила утилизации изделия, Вы поможете предотвратить причинение окружающей среде и здоровью людей потенциального ущерба, который возможен, в противном случае, вследствие неподобающего обращения с подобными отходами. За более подробной информацией об утилизации этого изделия просьба обращаться к местным властям, в службу по вывозу и утилизации отходов или в магазин, в котором Вы приобрели изделие.

Downloaded from www.Manualslib.com manuals search engine

ACTIVATING THE CONTRAST PLUS (BLACK STRETCH) CONTROL

The Contrast Plus (Black Stretch) feature helps to "sharpen" the picture quality. The black portions of the picture become richer in darkness and the whites become brighter.

BEGIN

1. **Press the MENU button** on the remote to display the onscreen menu.
2. **Press the CURSOR UP ▲ or CURSOR DOWN ▼ buttons** until the words **CONTRAST PLUS** are highlighted.
3. **Press the CURSOR RIGHT ▶ or CURSOR LEFT ◀ buttons** to activate or deactivate the **Contrast Plus** feature.

STOP

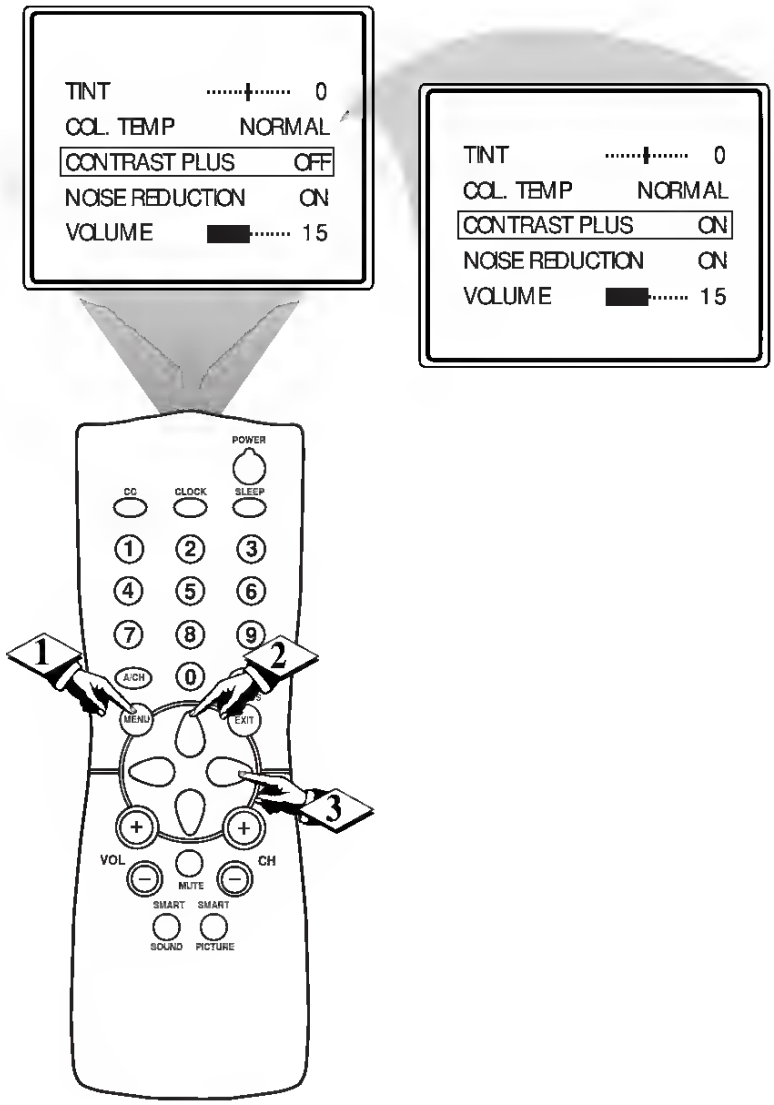

SMART HELP

Remember: The onscreen menu will disappear in a few seconds after you have finished your adjustment.

Downloaded from www.Manualslib.com manuals search engine

CD CHANGER PLAY

CD text information

CD text information is available only if the optional AIWA ADC-EX106 CD changer, which supports CD text, is connected to this unit and a CD with CD text is played on it.

Each time you press DISP, the display changes as follows.

Radio/Tape Play/CD Changer Play indication
↓
CD text information: Disc title*
↓
CD text information: Track title*
↓
Clock (page 5)

*CD text information (disc title, track title) is displayed only when it is available.

CONNECTING A PORTABLE CD/MD PLAYER OR OTHER EQUIPMENT

This unit is equipped with a line-level input (CD/MD IN) jack, enabling high sound quality.

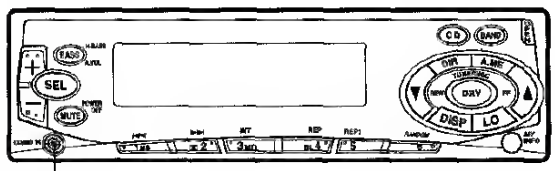

1

1 **Connect a portable CD/MD player, etc. via the CD/MD IN jack (3.5-mm dia.) on the unit.**

2 **Start playback from the connected equipment.**
The "CD IN" indication appears.

- For further information on the portable CD/MD player, etc., refer to the operating instructions for the equipment.

Notes

- Connecting a plug to the CD/MD IN jack cancels Radio, Tape Play and CD Changer Play mode and activates CD/MD IN mode. Disconnecting the plug cancels CD/MD IN mode and returns the unit to its former status.
- When the timer is activated (page 9), connecting a plug to the CD/MD IN jack does not switch the unit to CD/MD IN mode. Press DIR, CD, or BAND before connecting the plug to the CD/MD IN jack.

Downloaded from www.Manualslib.com manuals search engine

Installation

NOTE: If you are updating from an older version of CoPilot®, you may want to uninstall the older version first (see *Uninstalling*, p. 20-21). This is not required, however. CoPilot Live | Laptop 7 can be installed while another version of CoPilot remains on your computer.

1. To install CoPilot, first turn on your computer (and the external CD-ROM drive if necessary). Have your **Product Key Code** ready (this code can be found on the front of the printed *Quick Start* that came with your product). **Do not lose this Key Code, you will need it for installation and registration.**

2. Insert the CoPilot **Install Disc** into your CD-ROM drive. The installation will start automatically within a few seconds.

3. After clicking **Yes** to accept the License Agreement, enter your Product Key Code (see Step 1) when prompted, then click **Next**.

4. Follow the instructions, clicking **Next** to go from one screen to the next in the Installation Wizard. As the installation proceeds, you will be given the choice to install CoPilot map data. **It is recommended that you install the Map Data to your hard drive**. A full installation of the data can require up to **1 GB** of available space depending on which region you're installing. If space is unavailable, you can run the program by inserting the **Data Disc** into your CD-ROM drive after you open the CoPilot application. NOTE: Once a region is installed it cannot be changed.

Downloaded from www.Manualslib.com manuals search engine

7. Configuring Wireless Settings

7.1 Infrastructure Mode

Note: *The following instructions describe how to setup the IP Camera in wireless Infrastructure mode. Use this mode if you are connecting wirelessly through a wireless router / access point. You should use a wired connection to configure the following wireless settings before unplugging the network cable from the IP Camera.*

Step 1 At the Setup Wizard, select the desired Camera from the list and click on the **Web Config** button.

Step 2 Click on **System Administration** to enter the Web Configuration Utility.

Downloaded from www.Manualslib.com manuals search engine

DHCP Client Table: Clicking this button will bring up a list of all DHCP Clients connected to the NAS device. Note that this option is only applicable if the device is in Server Mode.

Fixed Mapping: By clicking this button and Enabling the MAC Address Control, the NAS can be setup to specifically assign an IP address to a certain computer based on the computers MAC Address. This way the IP address of the computer will never change, where normally it may change when the computer is powered on/off.

4.3 Setup – System Time

This page is similar to the System Time setting as described in the Setup Wizard in **Section 4.1 Step 4**.

Downloaded from www.Manualslib.com manuals search engine

5. Unscrew the hinge (B1) and remove the cover plate (B2) and the support (B3).

   Remove the cover (B4) on the opposite side and install the support (B3) the cover plate (B2) and the hinge (B1). Install the cover (B4) on the opposite side.

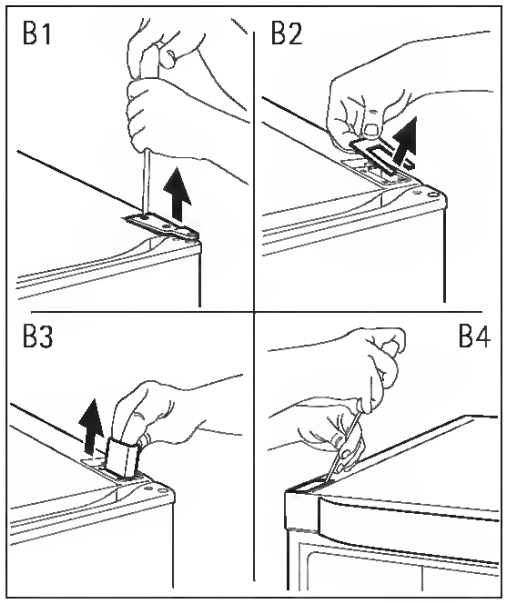

6. Unscrew the lower hinge (C1). Move the pin to the opposite side (C2). Unscrew and move the pedal to the opposite side (C3).

   Screw on the lower hinge on the opposite side.
7. Tighten the pin with the adjustment spanner supplied.
8. Install the handle on the opposite side.
9. Raise the appliance and install the ventilation grille.
10. Put the cabinet in position.

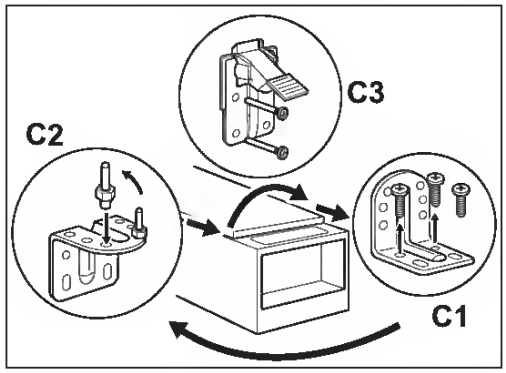

WARNING!
Reposition, level the appliance, wait for at least four hours and then connect it to the power socket.

Do a final check to make sure that:

- All screws are tightened.
- The magnetic seal adheres to the cabinet.
- The door opens and closes correctly.

If the ambient temperature is cold (i.e. in Winter), the gasket may not fit perfectly to the cabinet. In that case, wait for the natural fitting of the gasket.

NOISES

There are some sounds during normal running (compressor, refrigerant circulation).

Downloaded from www.Manualslib.com manuals search engine

TIMER OPERATIONS

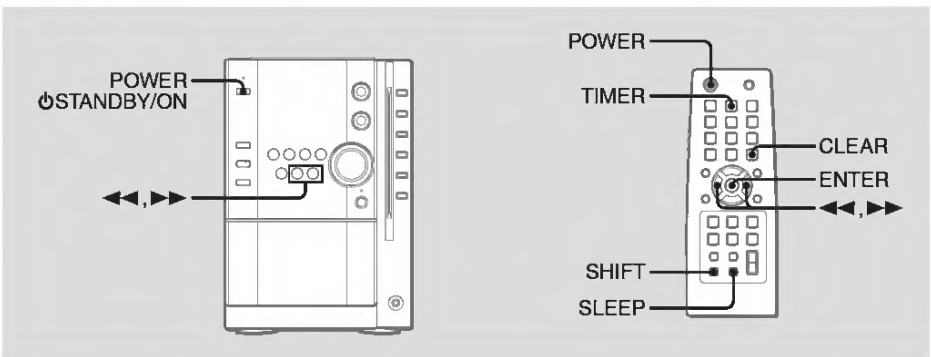

Sleep timer

Turns off the unit automatically after a specified time.

Press SLEEP on the remote.
"SLEEP" flashes in the display.
With each press, the timer duration changes as follows:

AUTO → 90 → 80 → 70 ... 10 → OFF

If you set to "AUTO", the unit turns off automatically when the current CD or tape finishes playback or elapsed 100 minutes.

To check the remaining time until the unit turns off
Press SLEEP on the remote. The remaining time is displayed for 6 seconds.

To cancel the sleep timer
Press SLEEP on the remote repeatedly so that "OFF" is displayed.

Timer playback

Turns on the unit at a specified time for the specified duration. Make sure the clock is set correctly.

1 Press VOLUME +, — to set the volume level.

2 Hold down SHIFT and press TIMER on the remote repeatedly so that "⏲" and "TIMER PLAY" is displayed.

3 Within 6 seconds, press ENTER.
"ON TIME" is displayed.

4 Press ◄◄ or ►► to set the timer start hour, and press ENTER.

5 Press ◄◄ or ►► to set the minute, and press ENTER.
"OFF TIME" is displayed.

6 Set the time to stop playback by following the same procedures as steps 4 and 5.

7 Press ◄◄ or ►► to select the source (CD, TAPE and TUNER), and press ENTER.

8 Prepare the source.
To play CD, load disc(s).
To play a tape, insert the tape.
To play the radio, select the band and tune in the desired station.

9 Press POWER ⏻STANDBY/ON (POWER) to turn the unit off.
"⏲" remains in the display to indicate the timer standby mode (when ECO mode is deactivated).
At timer-on time, the unit turns on and plays the selected source. After the specified timer-activated duration, the unit turns off again.

- To stop timer setting in steps 4 to 6, press CLEAR. Timer standby mode is also cancelled.
- The timer playback is not activated when the clock is not set. ("SET NG" is displayed.)
- Timer playback will not begin unless the unit is turned off first.
- Timer playback for AUX function is not possible.

En

Downloaded from www.Manualslib.com manuals search engine

4. Click **Next** to continue.

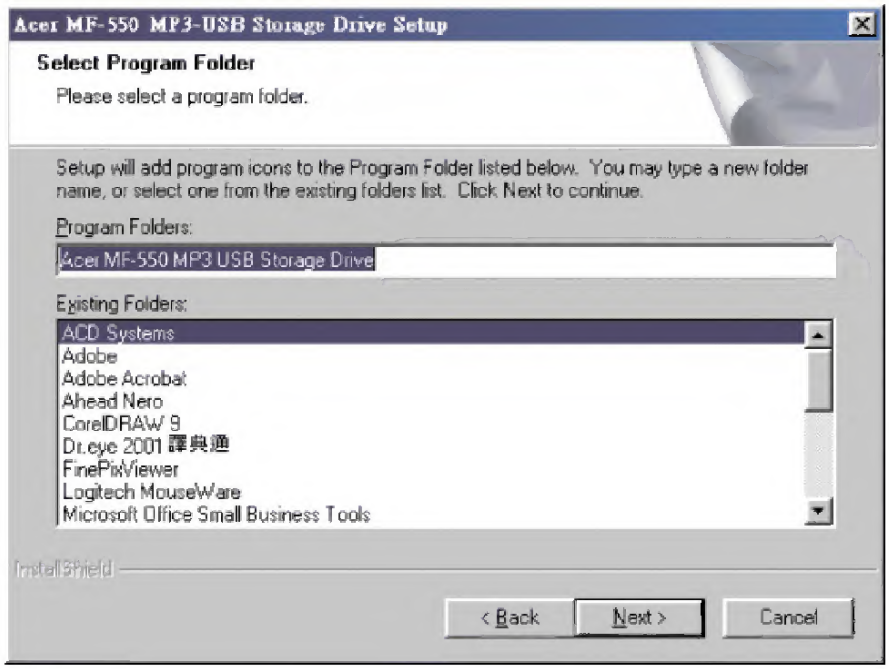
Acer MF-550 MP3-USB Storage Drive Setup
Select Program Folder
Please select a program folder.
Setup will add program icons to the Program Folder listed below. You may type a new folder name, or select one from the existing folders list. Click Next to continue.
Program Folders:
Acer MF-550 MP3 USB Storage Drive
Existing Folders:
ACD Systems
Adobe
Adobe Acrobat
Ahead Nero
CorelDRAW 9
Dr.eye 2001 譯典通
FinePixViewer
Logitech MouseWare
Microsoft Office Small Business Tools
InstallShield
< Back
Next >
Cancel

5. Installation is on going.

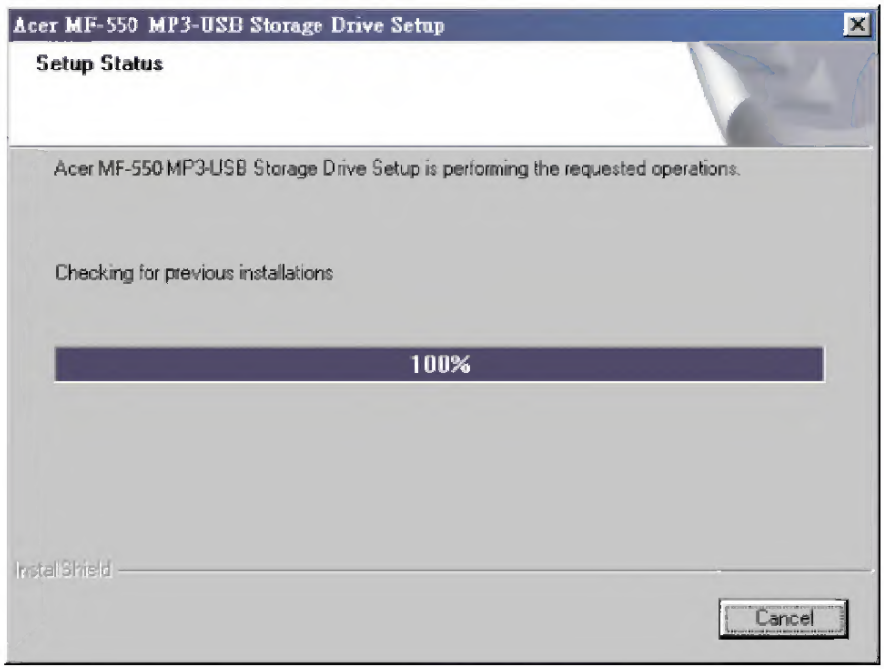

Downloaded from www.Manualslib.com manuals search engine

4-7. SCHEMATIC DIAGRAM MAIN SECTION (2/5)

• Refer to page 40 for Waveforms. • Refer to page 41 for IC Block Diagrams. • Refer to page 46 for IC Pin Function.

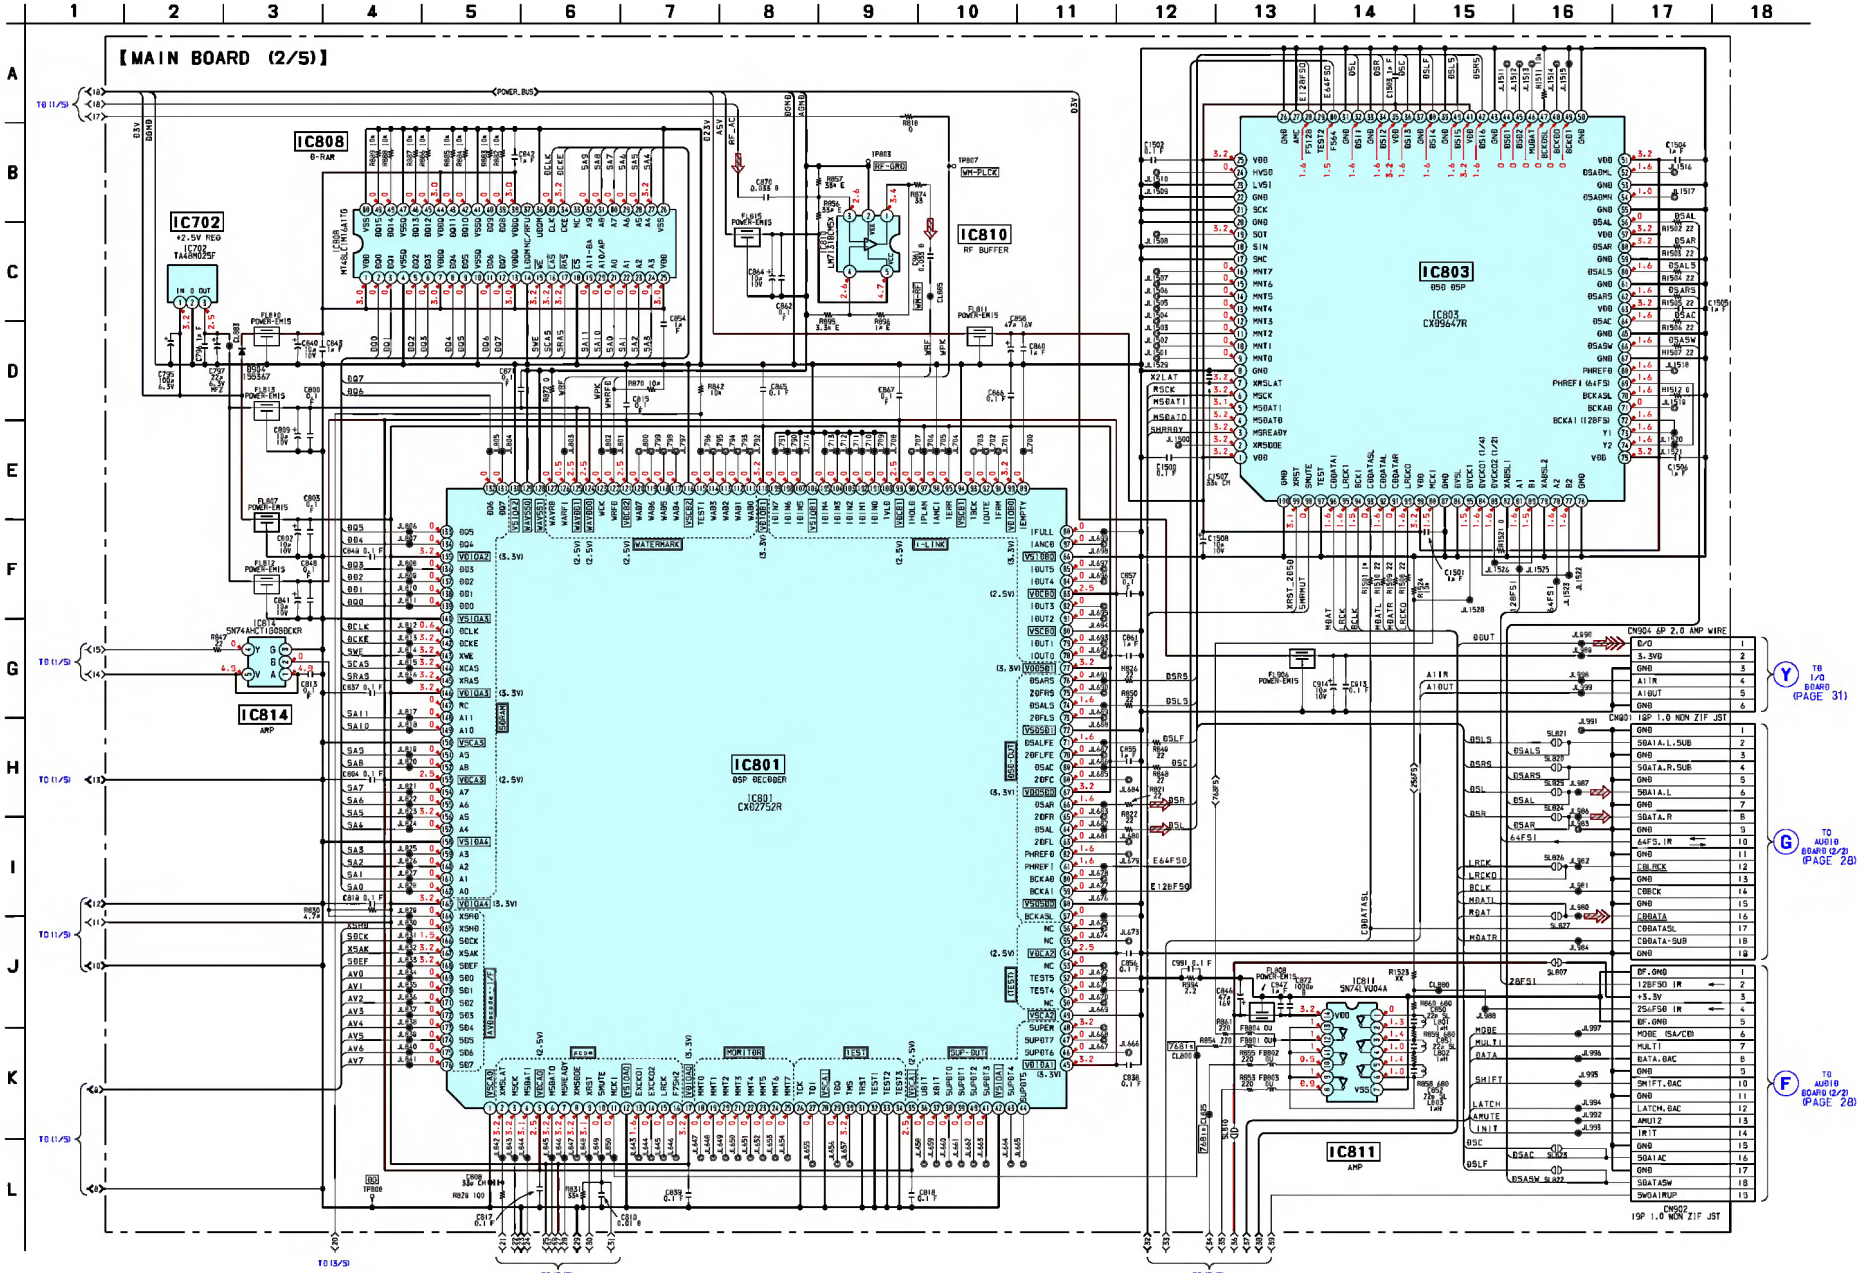

English

Standard	Description	Results
EN61000-3-2: 2000 AS/NZS 61000.3.2: 2003	Limits for harmonics current emissions	Pass
EN61000-3-3: 1995 A1: 2001/ AS/NZS 61000.3.3: 1998	Limits for voltage fluctuations and flicker in low-voltage supply systems.	Pass

Conforms to the Low Voltage Directive 73/23/EEC as attested by conformity with the following harmonized standard:

EN60950: 2000 3rd: Safety of Information Technology Equipment Including electrical business equipment.

This equipment has been approved to Council Decision 98/482/EC (CTR21) for pan- European single terminal connection to the Public Switched Telephone Network (PSTN).

We, Acer Inc., hereby declare that the equipment bearing the trade name and model number specified above was tested conforming to the applicable Rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same equipment will continue to comply with the requirements.



Easy Lai / Director

Acer Incorporated.

al connection to the Public Switched Telephone Network (PSTN).

We, Acer Inc., hereby declare that the equipment bearing the trade name and model number specified above was tested conforming to the applicable Rules under the most accurate measurement standards possible, and that all the

Downloaded from www.Manualslib.com manuals search engine